



NEW POD SPACERS BETTER, STRONGER



// WHAT CAN THESE RAFT SPACERS BE USED FOR?

There are two spacers in this series. The **STYROBECK SS1** spacer and the **STYROBECK SS2**. They can be clipped together to form a variety of combinations.


- The **STYROBECK SS1** is designed to form a 100mm space between pods, also it can create 200mm, 300mm and 400mm spaces between pods and perimeter.
- Slab thickenings or internal beams can be formed in multiples of 100mm by adding **STYROBECK SS2** spacers to the **STYROBECK SS1**.

// ADVANTAGES:

- Better design
- Stronger than most spacers currently on the market
- Produced in house by Styrobeck
- Made from 100% recycled materials
- Less extensions required

// APPLICATIONS

● Ribraft floors

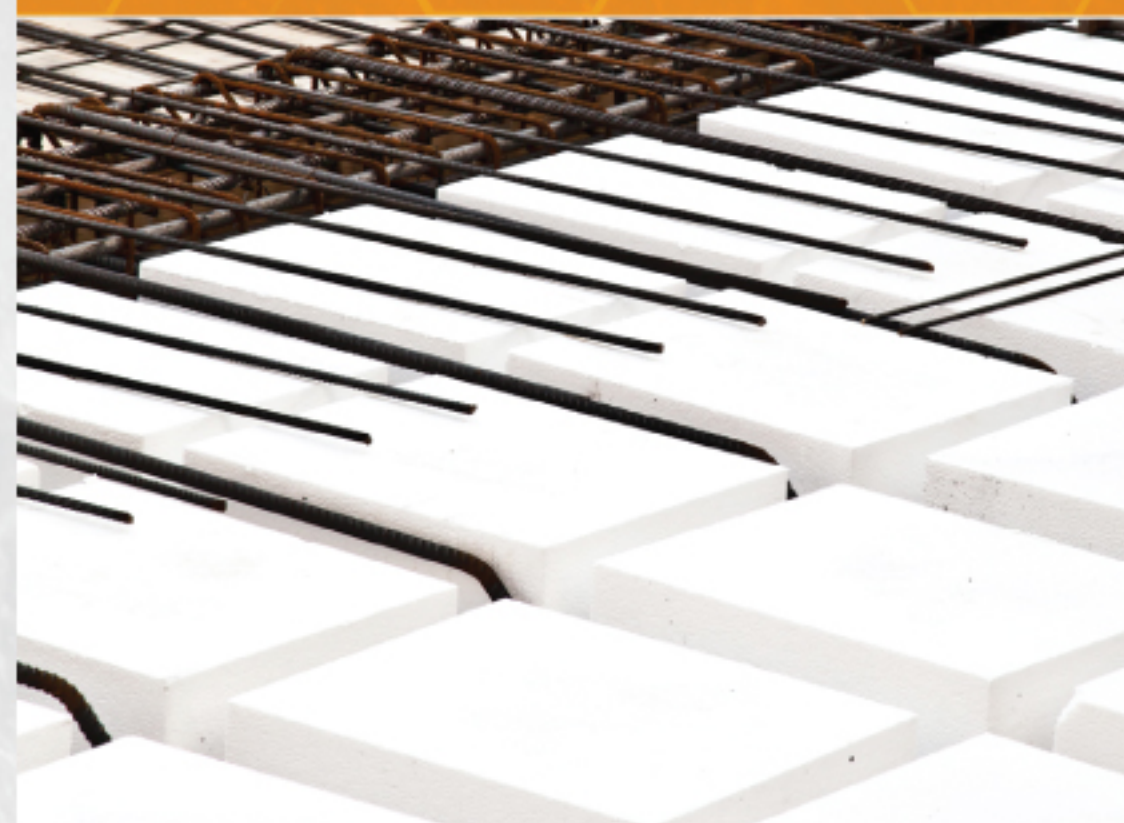

// HOW MANY SPACERS DO I NEED?

For every **100 pods** you will require **140 SS1 spacers** and **20 SS2 extensions**.

SS2

SS1

OUR F100, F200, F300, WJ100, WJ101 ARE STILL AVAILABLE

WJ100

WJ101

F100

F300

MC25/40

// DO YOU KNOW THAT YOU COULD HAVE A 110MM SPACER?

The 10mm clip can be added to the 100mm spacer to turn it into a 110mm spacer For more details give us a call.

PART #	DESCRIPTION	PACK SIZE
SS1	100mm SUPER SPACER	20
SS2	100mm SUPER SPACER EXTENSION	20
SS3	110mm SPACER	20
SS4	110mm SPACER EXTENSION	20
F100	100mm INTERNAL SPACER	15
F200	200mm INTERNAL SPACER	25
F300	300mm INTERNAL SPACER	20
WJ100	100mm SPACER	25
WJ101	100mm EXTENSION	25
MC25/40*	25/40 MESH CHAIR	100

* Other sizes available

Auckland

139 Roscommon Road
Manukau City
PO Box 76-894
Manukau City 2241

Ph. +64-9-278-7175
Fax.+64-9-278-7193

Wellington

64 Pharazyn St
Lower Hutt
5010 Wellington

Ph. +64-4-586-0254
Fax. +64-4-586-0031

